

ZEN / ZENTU

42" SQUARE FIRE PIT



Features

 
- Color Ring -Endless Color Selection
- Brightness Control
- Speed Control
- 20 PreSet-Modes
- Remote 60' (20 meters) Operating Range
- Rechargeable Battery Pack

Date _____
 Order # _____
 LED Tested _____
 Battery Tested _____

Direction For Remote Set-Up and Rechargeable Battery Installation:

Remote Control Set-Up

Open the battery cover, insert the two "AAA" batteries with the + and - ends facing as shown in the battery compartment. Close the battery cover and press down until it clicks into place.

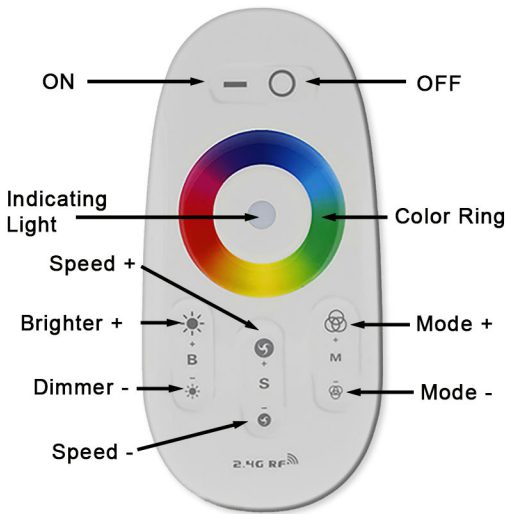


Program List

No.	Mode	Brightness	Speed
1	Static white color	Adjustable	Nonadjustable
2	White color gradual changes	Adjustable	Adjustable
3	All color gradual change	Adjustable	Adjustable
4	Red/Green/Blue three color gradual change	Adjustable	Adjustable
5	Seven colors jump to change	Adjustable	Adjustable
6	Three colors jump to change	Adjustable	Adjustable
7	Red/Green jumps to change	Adjustable	Adjustable
8	Red/Blue jump to change	Adjustable	Adjustable
9	Blue/Green jump to change	Adjustable	Adjustable
10	White color frequently blinks	Adjustable	Adjustable
11	White color glitters	Adjustable	Adjustable
12	Red color frequently blinks	Adjustable	Adjustable
13	Red color glitters	Adjustable	Adjustable
14	Green color frequently blinks	Adjustable	Adjustable
15	Green color glitters	Adjustable	Adjustable
16	Blue color frequently blinks	Adjustable	Adjustable
17	Blue color glitters	Adjustable	Adjustable
18	Yellow color frequently blinks	Adjustable	Adjustable
19	Yellow color glitters	Adjustable	Adjustable
20	Circulation Mode		

Charging the Battery

 
Remove the battery from inside the Zen fire pit. Connect the battery 2-pin connector to the AC adapter. Connect the AC adapter to your wall source.

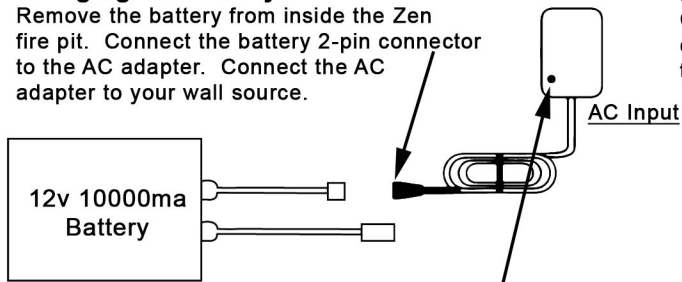

Battery is fully charged when the LED red light turns green on AC adapter.

LED Battery Connection

 Connect the battery 2-pin connection to the LED receiver cable. Note the LED lights will turn on. Use the remote to select a solid color or preprogrammed mode.

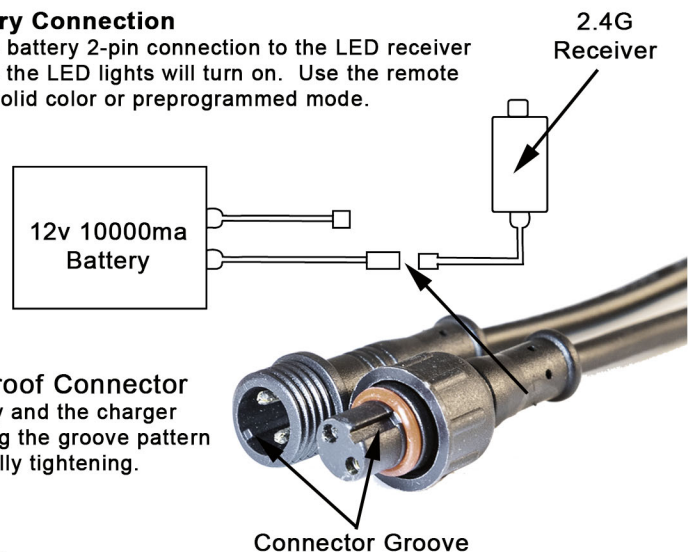

2-Pin Water Proof Connector
 Secure the battery and the charger connector ensuring the groove pattern matches before fully tightening.